





badlime
 promo & apparel

Placement Chart (SCREENPRINTING)


The following chart provides the suggested measured positioning for printed images.

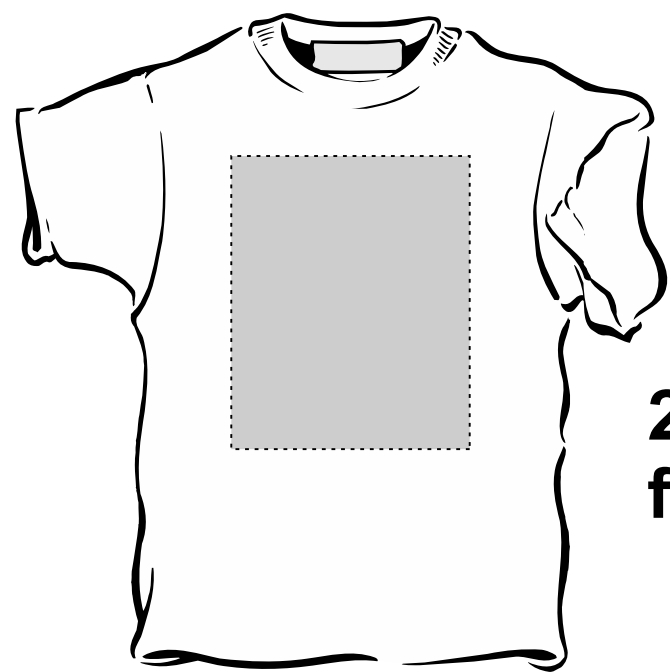


2.0" - 2.5"
 from neck seam

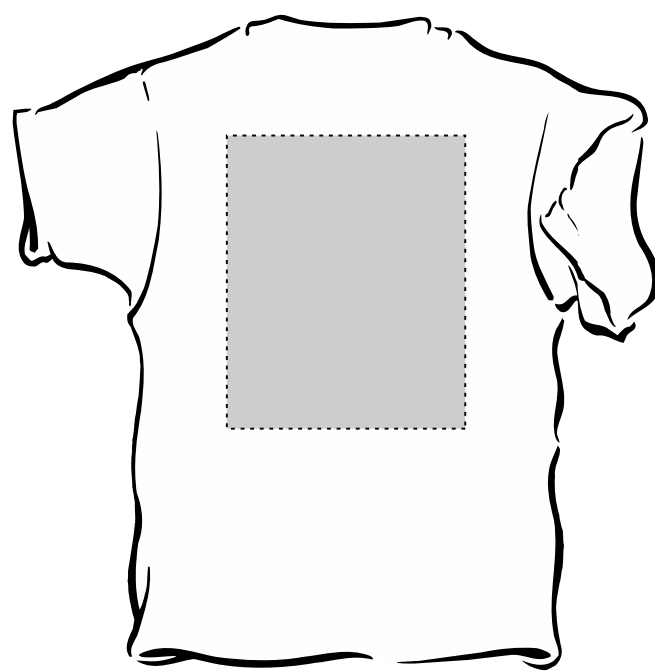

3.0" - 4.0"
 from neck seam.
 (If image is 6.0" tall or
 shorter start 5.0" below seam)

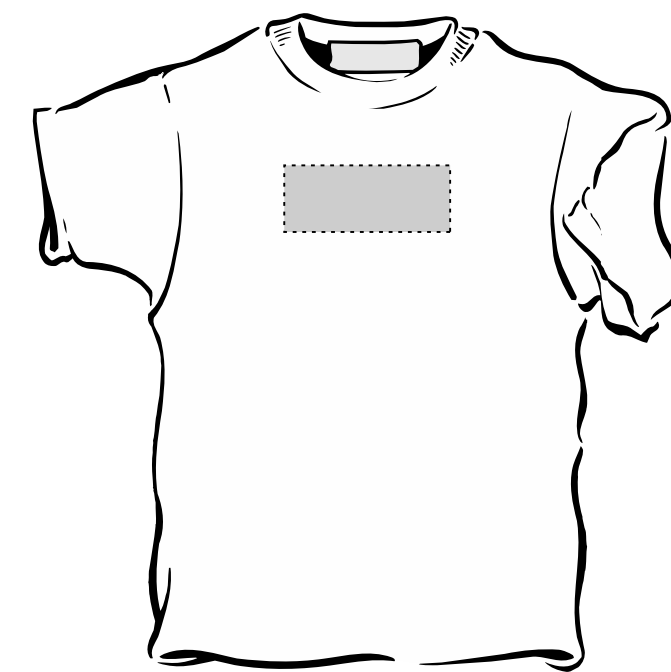


3.0" - 3.5"
 from neck seam

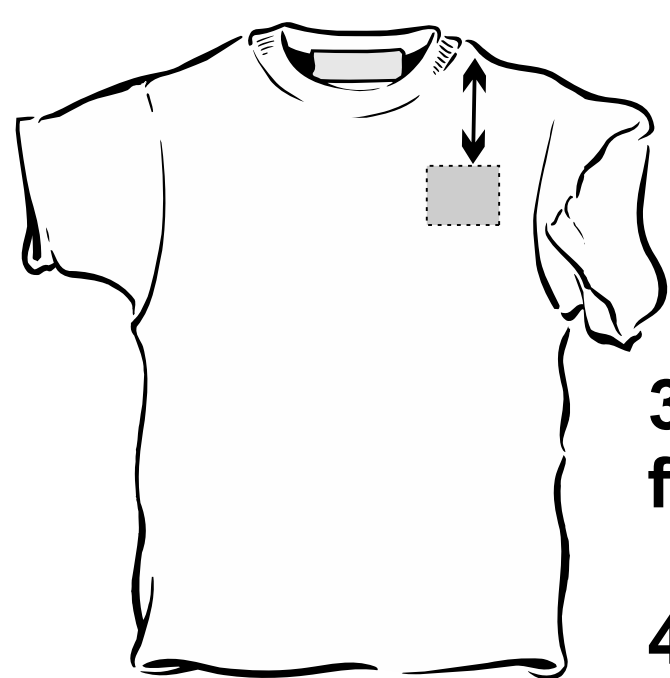


3.0" - 3.5"
 from neck seam
4.0" on 3X and larger


center w/highpoint
 of shoulder

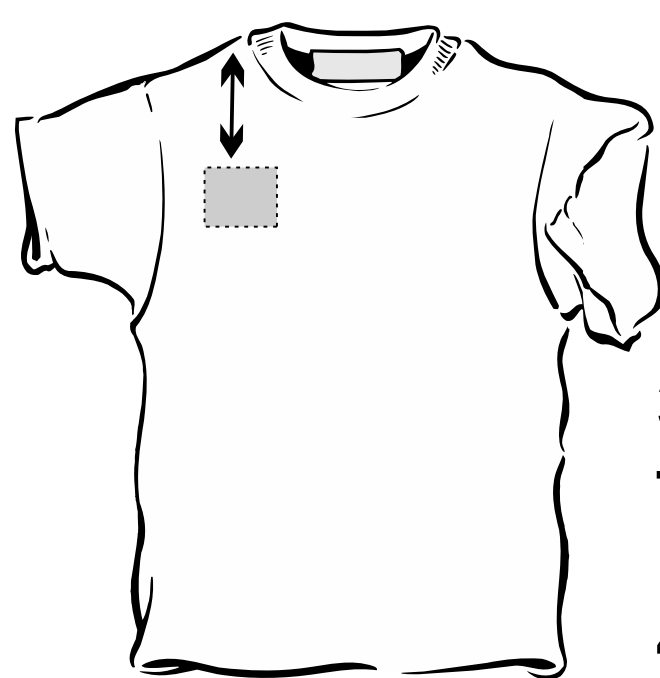


3.0" - 3.5"
 from neck seam
4.0" on 3X and larger

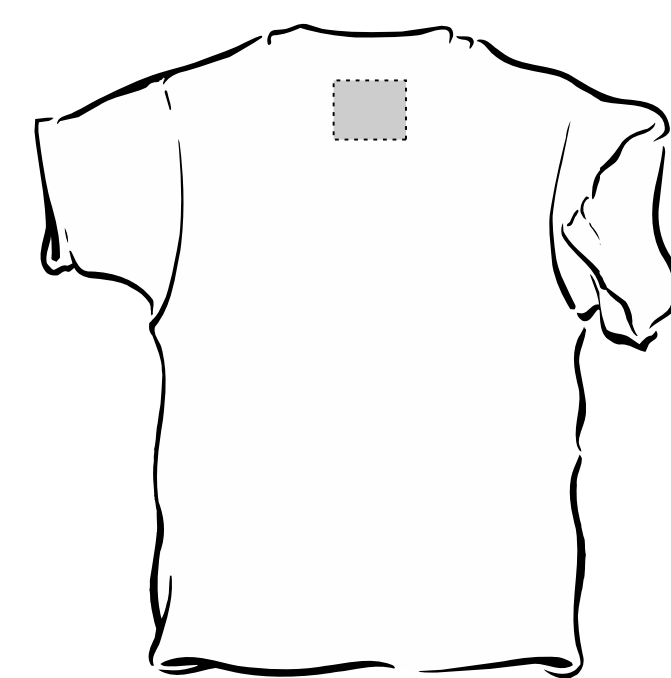


1.5" - 2"
 from neck seam

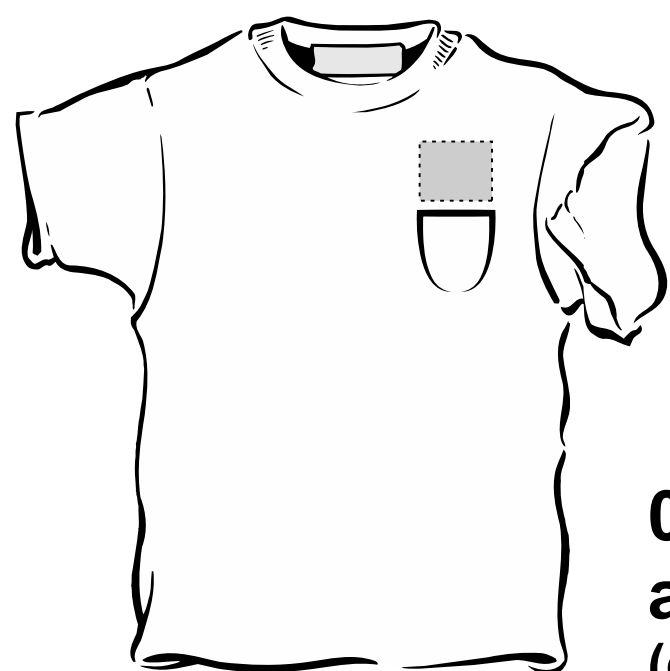


0.5" - 0.75"
 above pocket
 (centered above pocket)

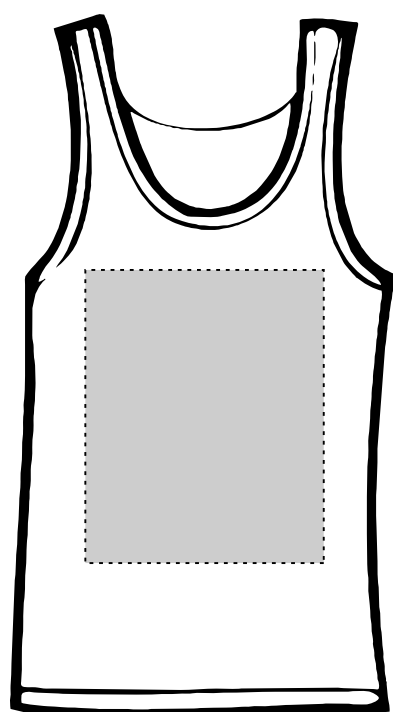


Deep Swoop
1.0" - 1.5"
 from seam
Crew Cut Tank
2.0"
 from neck seam
 (do not hit arm seam)

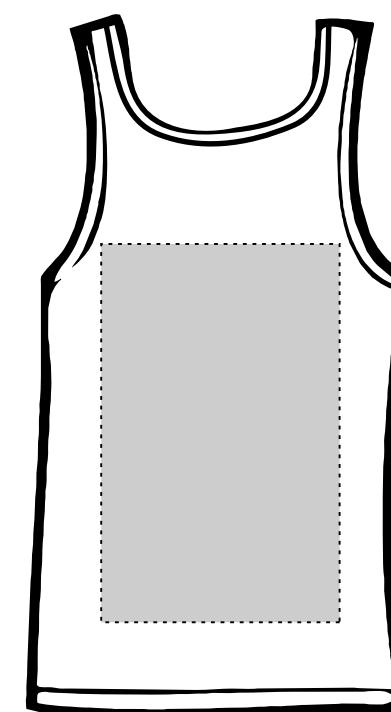


2.5 or low enough
 to miss arm seams

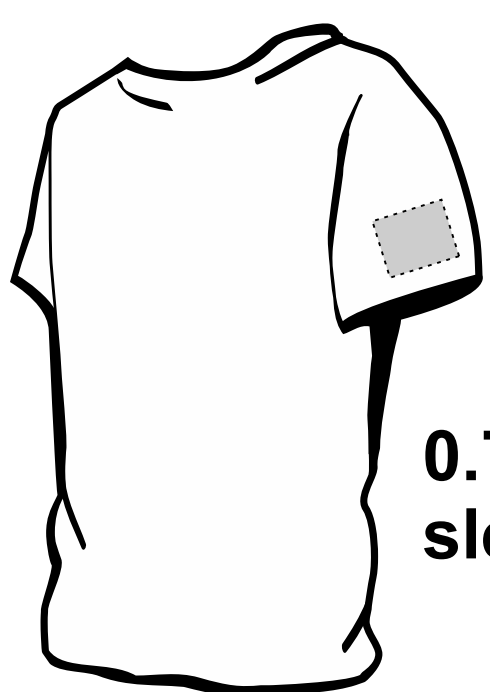


0.75" above
 sleeve seam

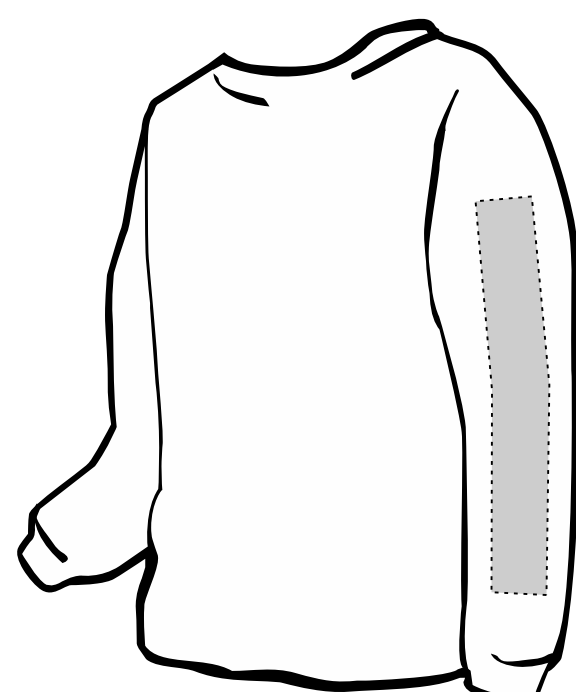


9.0" from
 neck seam or
4.5" from
 shoulder seam

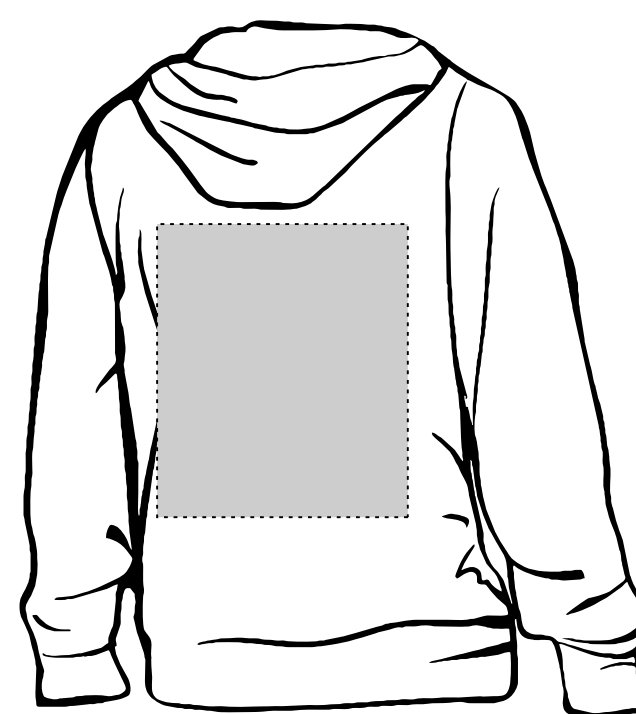


Hoodie Back
7" down or **1.5"**
 from bottom hem
 if full back print

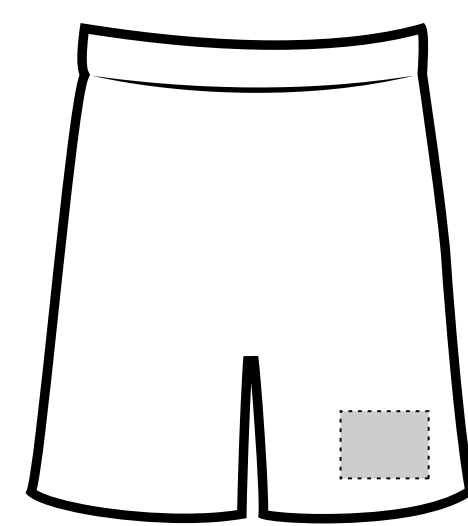


1.5" above
 bottom of
 shorts

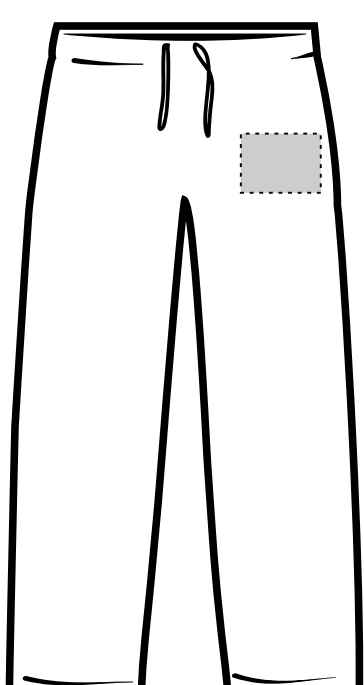

1.0" - 1.5"
 below pocket opening.
 Offload towards
 front-side of pant leg

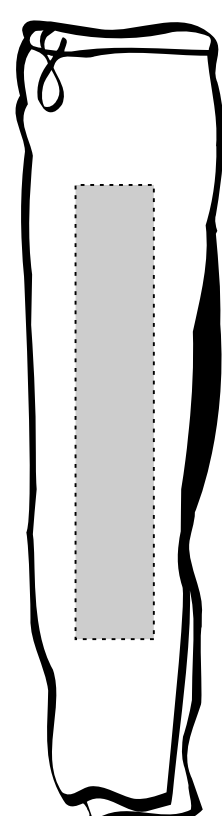

1.0" - 1.5"
 below pocket opening.
 Offload towards
 front-side of pant leg

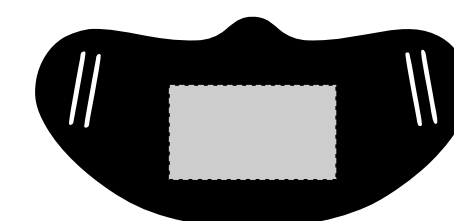

Center on mask
 unless otherwise
 specified

